

DKTV Kundecenter

Knowledgebase > Router / Netværksboks > Router > TP-Link > TP-Link - Ændring af kanal

TP-Link - Ændring af kanal

DKTV - 2018-06-01 - TP-Link

For at kunne ændre denne funktion forudsætter det, at du er logget ind i routeren.

[Vejledning kan findes her](#)

Ændring af kanal

1. Log ind i routeren - se ovenstående
2. Vælg "Wireless 2,4Ghz" eller "Wireless 5Ghz", afhængigt af hvilket netværk du ønsker at administrere.
3. Vær opmærksom på, at TP-links routere som standard benytter Regionen "United states", dette begrænser antal kanaler til 11. Det er derfor anbefalet, at man sætter Region til "Denmark".
4. I feltet "Channel" ændre du kanalen til den ønskede kanal.
Hvis denne sættes til "Auto", forsøger routeren automatisk at finde den mest optimale kanal.
5. tryk på "Save"

The screenshot shows the TP-Link Archer C7 router's web interface. The top header is green with the TP-LINK logo and the model name 'AC1750 Wireless Dual Band Gigabit Router Model No. Archer C7'. On the left is a navigation menu with options like Status, Quick Setup, Network, Dual Band Selection, Wireless 2.4GHz, Wireless 5GHz (highlighted), and various security and advanced settings. The main content area is titled 'Wireless Settings (5GHz)'. It contains the following fields and options:

- Wireless Network Name:** A text box containing 'TP-LINK_F00F_5G' with a note '(Also called the SSID)'.
- Region:** A dropdown menu set to 'United States'.
- Warning:** A text block stating 'Ensure you select a correct country to conform local law. Incorrect settings may cause interference.'
- Mode:** A dropdown menu set to '11a/n/ac mixed'.
- Channel:** A dropdown menu set to 'Auto'.
- Enable SSID Broadcast:** A checked checkbox.
- Enable WDS Bridging:** An unchecked checkbox.
- Save:** A button at the bottom of the settings area.

Related Content

- [TP-Link - Log ind i routeren](#)

- [TP-Link - Ændring af netværksnavn/SSID](#)
- [TP-Link - Ændring af netværkskode/Wireless password](#)